



Toshiba Satellite A85-S107 15" Disc Drive Replacement

This guide will demonstrate how to install the disc drive.

Written By: Alana



INTRODUCTION

Use this guide to replace or install the disc drive in your Toshiba laptop.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- plastic openers
- [iFixit Opening Tools](#) (1)



PARTS:

- [CD-RW/DVD-ROM Drive Model #TS-L462](#) (1)
-

Step 1 — Battery



- Power off the laptop.


⚠ Disconnect the power cable from the laptop. If you do not, electric shock may result.

Step 2




- Flip the laptop over and orient it such that the battery faces towards you and the front faces away from you as shown in the diagram.
- Unlock the battery by sliding the tab shown to the right
- This tab will latch into place.

Step 3

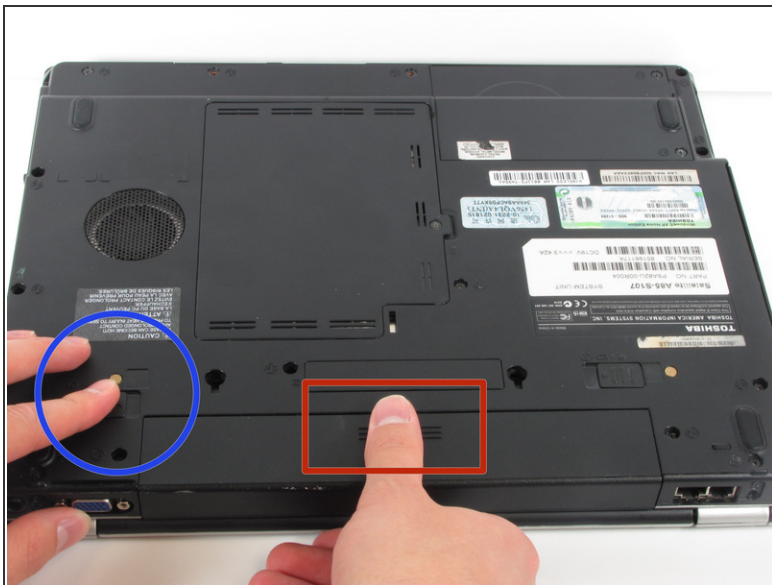


- Slide the tab shown to the left and remain holding it.
 - This tab does not lock into place like in the first step.
- Place your thumb on the grips of the battery as shown.
 - While holding onto the grips, pull the battery towards you and away from the laptop.

Step 4 — Disc Drive

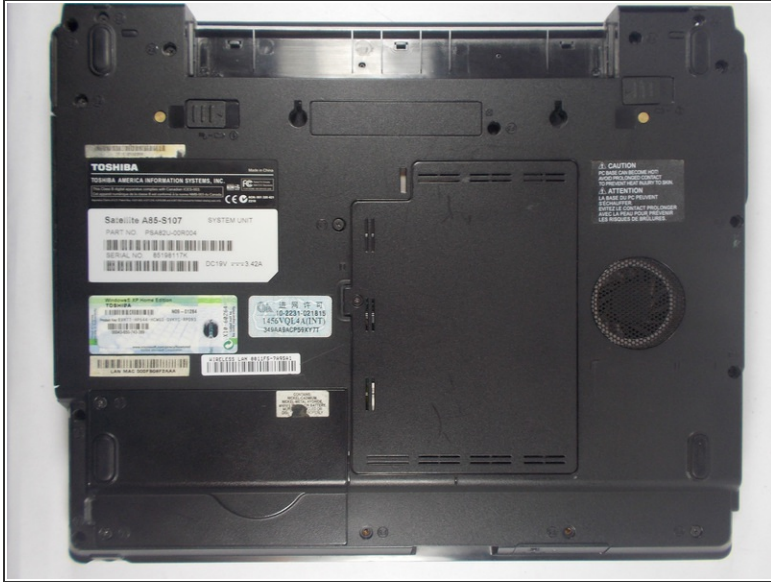

- Flip the laptop over and orient it so that the battery faces away from you.
- Remove the 5mm Phillips #0 screw on the bottom case.

Step 5

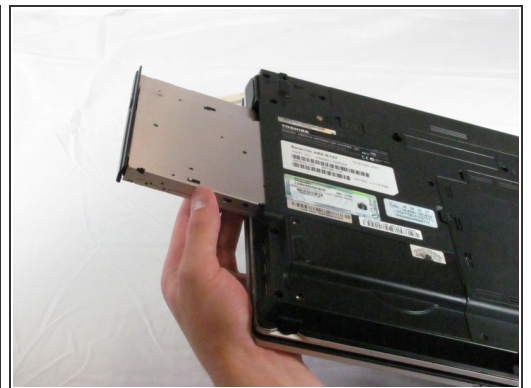

- Insert the plastic opening tool into the gap between the disk drive and the laptop and pop out the disk drive.
- Slid the disc drive out of its slot on the left side of the computer. It should slide out easily.

To reassemble your device, follow these instructions in reverse order.

